

• Acute Angle Rail Assemblies – Nonprogressive •

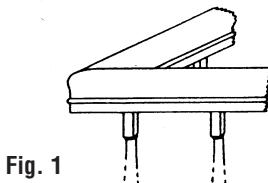


Fig. 1

Typical stair rail acute angle joint.

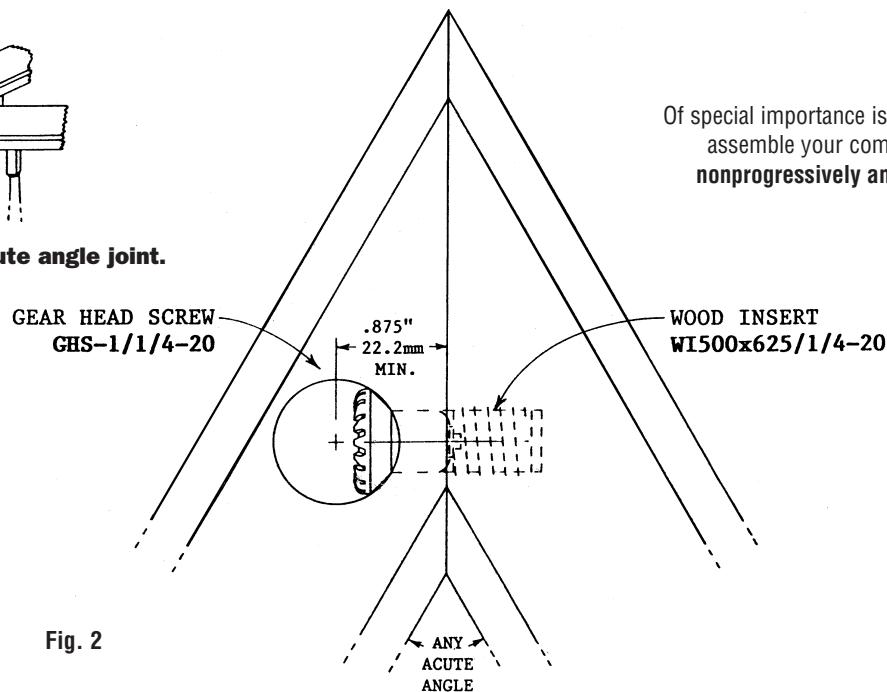


Fig. 2

Of special importance is the ability to assemble your components nonprogressively and rapidly

Above is a bottom view of two hand rails joined at an acute angle, illustrating how you can use the Norse **Gear Head Screw** in very cramped quarters.

• Wood Insert Installation and Tool •

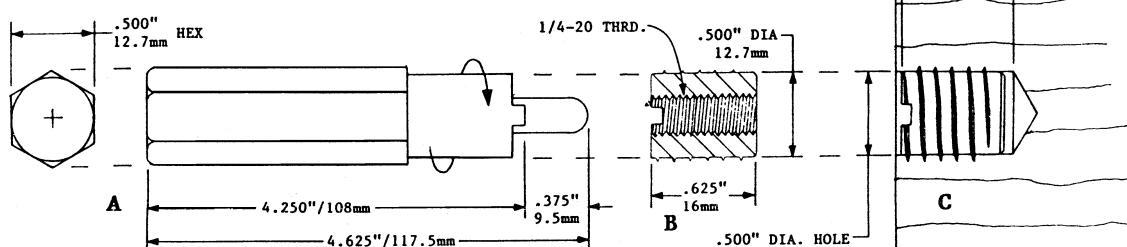


Fig. 3

INSTALLATION TOOL
ITWI-3

WOOD INSERT
WI500x625/ 1/4-20

WOOD INSERT
INSTALLED

Fig. 4

A

WOOD INSERT – EXTRA LENGTH
WI500x1.250/ 1/4-20

WOOD INSERT
INSTALLED